

Installing the Eclipse 3.5 Software

You can download Eclipse 3.5 software here: <https://thecmcdactor.com/backup.html>.

Eclipse Software Backup


Click [here](#) to download the Eclipse 3.5 software.

Click on the SAVE button and save the file to your computer's Desktop. Burn this file to a CD. The CD must be a DATA disc, sometimes called a master. You can also use a USB stick (Win XP and above).


Click [here](#) to view the Eclipse® User's Manual.

Click [here](#) to view MatWriter® User's Manual.


The download is a compressed folder. You will need to extract all of the files. In this example, I have extracted the files to a folder named 3_5 Build. Double-click the setup.exe file to start the installation process.

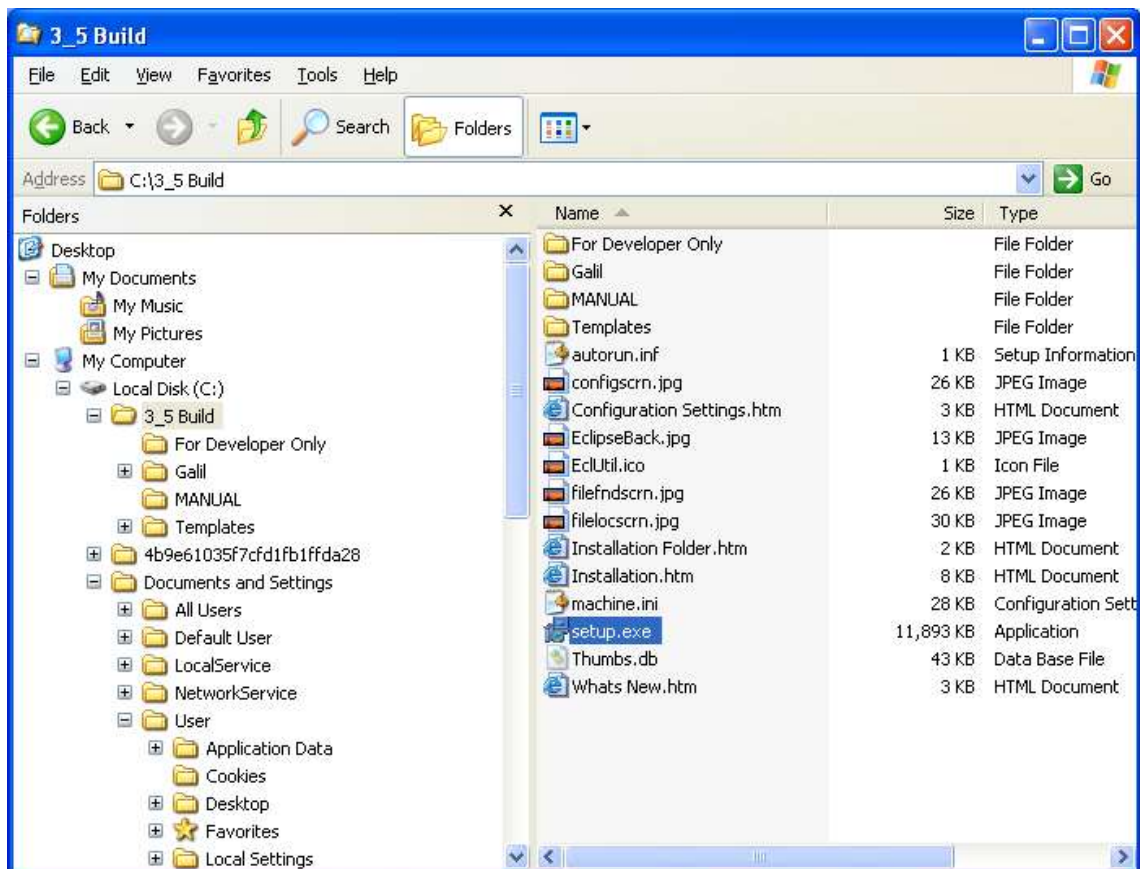


This is the opening screen of the installation. Click the Next> button.

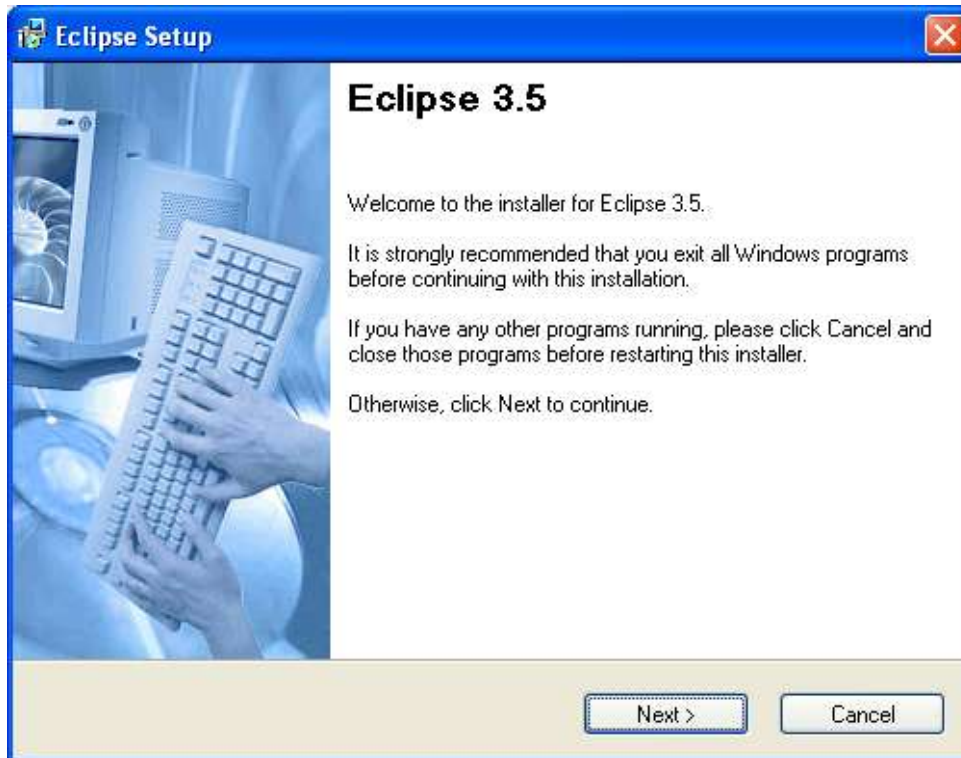


Wait while the software checks for a previous installation. This may take some time.

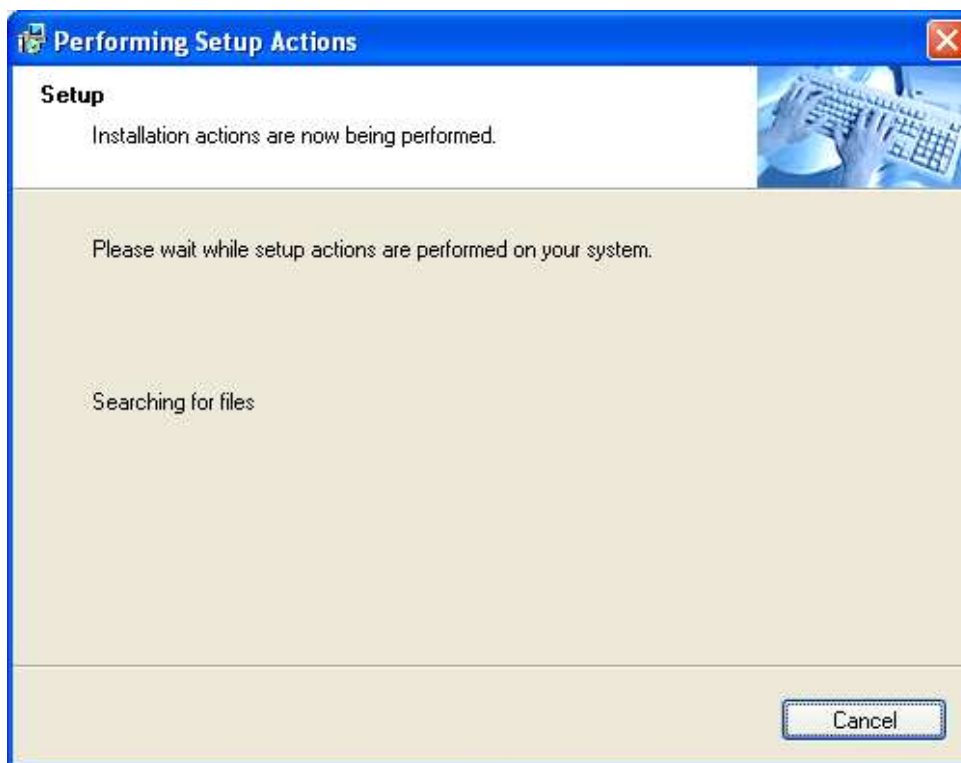

Click the I agree ... radio button. Then Click the Next> button.

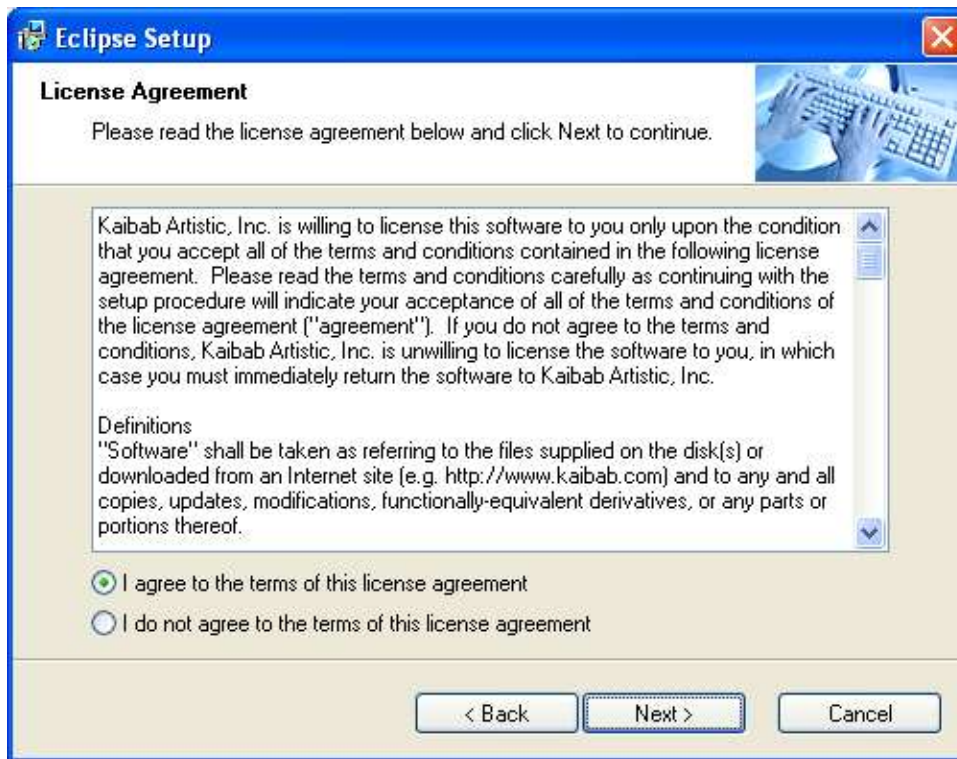


Click the Next> button to install the software in the default location.

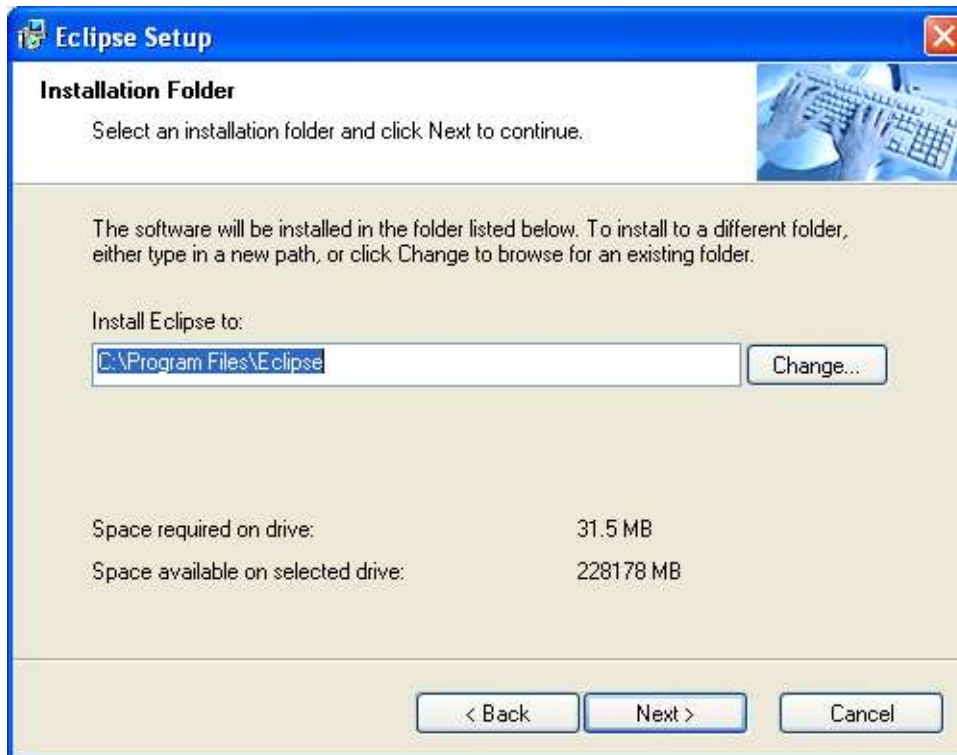


Click the Next> button.




Click the Next> button.

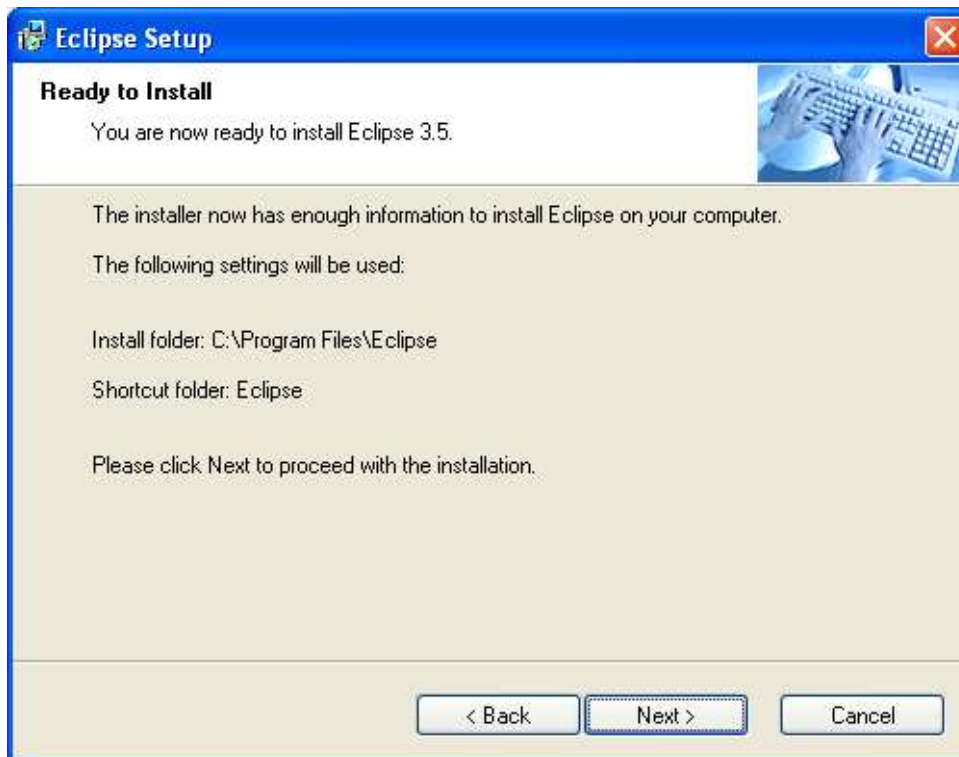


Wait while the software installs.

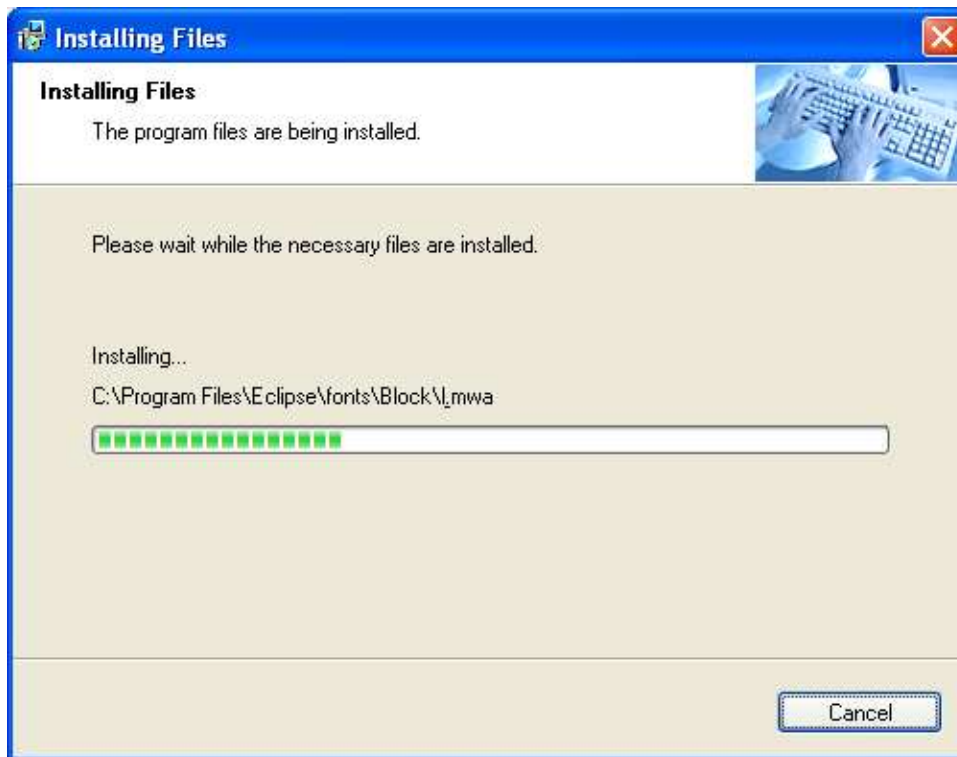


Chose the size of your cutting table and click the Next> button.

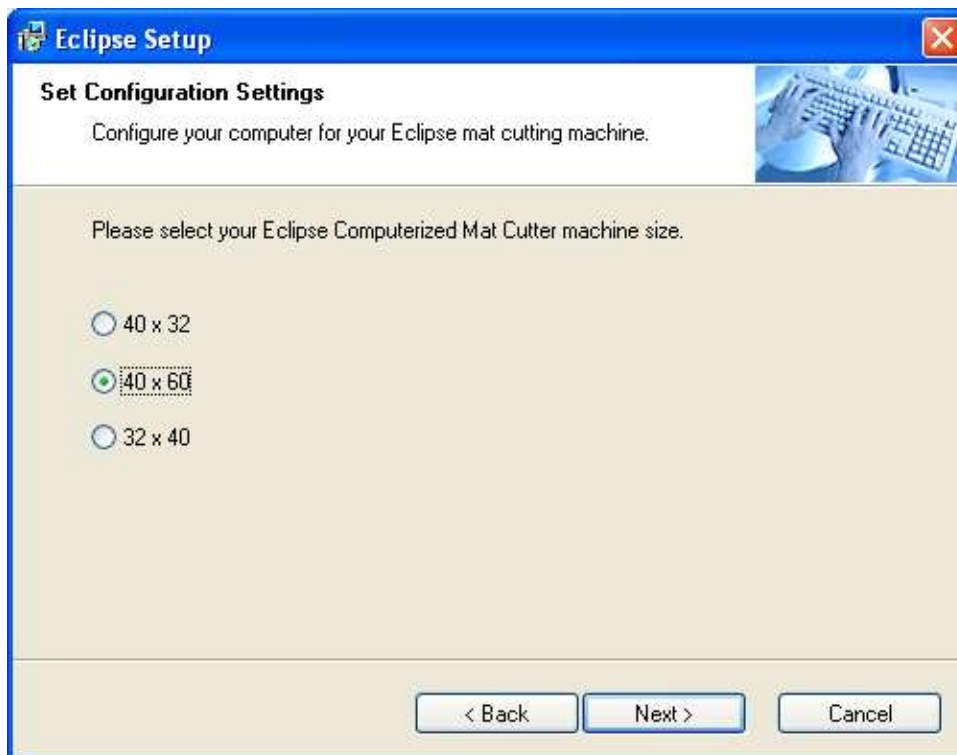

Chose the model of your machine and click the Next> button.

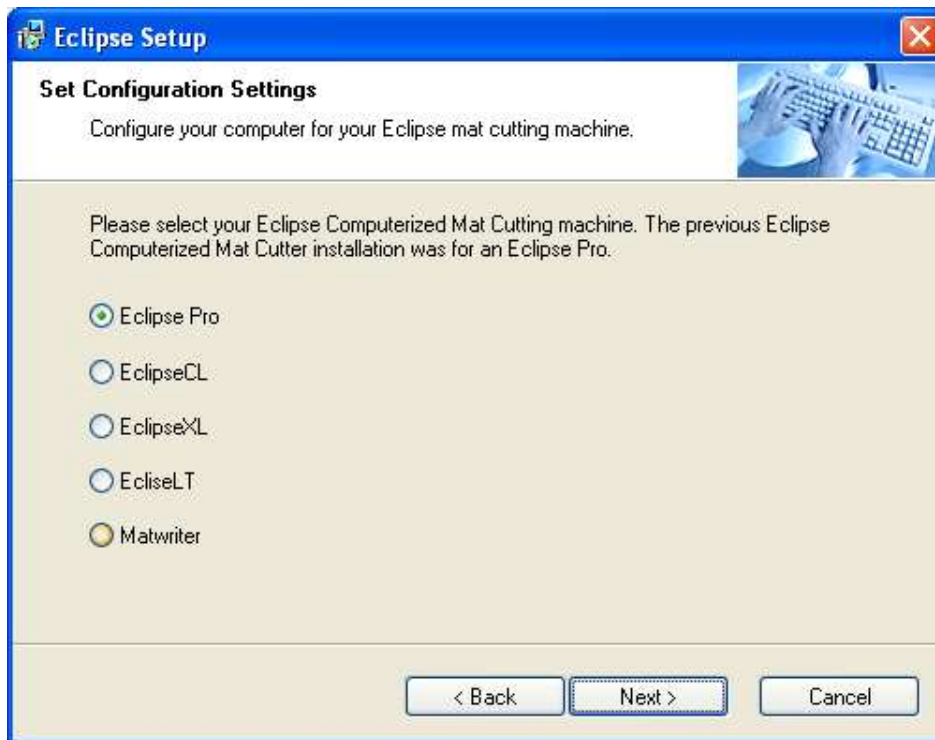

You can choose either option here, but if you think that your registry entries may be corrupt, chose "Load factory default settings". Then click the Next> button.

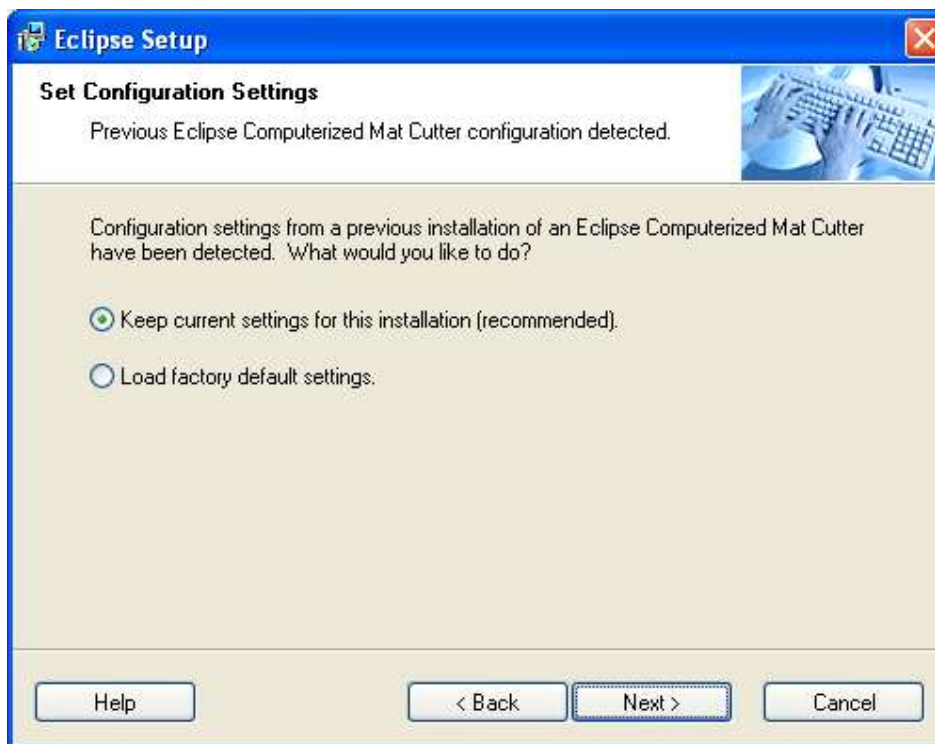

The Eclipse program files have been installed.



You can re-load your saved Settings and Machine Settings, or you can calibrate your Eclipse by following the instructions in this YouTube video: <https://www.youtube.com/watch?v=-cs05eGoz9c>.

A PDF file for use with the video can be found here:

<https://thecmcdoctor.com/Calibrating Your Eclipse CMC v2.pdf>

If you need help call The CMC Doctor. Contact information can be found here:

https://thecmcdoctor.com/thecmcdoctor_contact.php